
Model 3000 and Model 3100 Micro **Modular Infusion Systems**


OPERATOR'S GUIDE

PRIMING

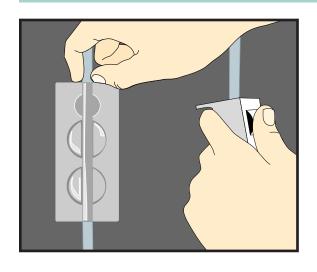


- 1. Remove administration set (tubing) from pouch. Discard if package is damaged or if protective end caps are missing or loose inside package.
- 2. Close lower roller clamp. Verify upper clamp is open.
- 3. Insert spike into solution container. Fill drip chamber at least one-third full. A completely filled drip chamber is acceptable.
- 4. Prime administration set by inverting cassette with flat side facing you. Slowly open lower roller clamp and allow solution to fill entire set. When all air has been expelled, close lower roller clamp.
- 5. Hang solution container so bottom of drip chamber is at least 6 to 12 inches above pump.


PUMP OPERATION

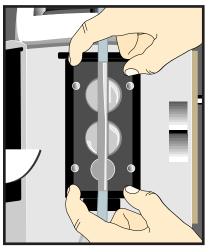

- 1. Pull door latch to open door.
- 2. Hold the cassette with flat side facing you. Place cassette in pump by aligning 4 holes in cassette with 4 pins.

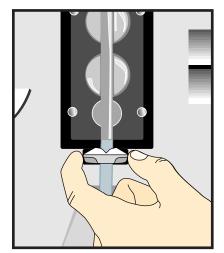


- 3. Place safety clip in slot and push fully inward.
- 4. Close and latch door.

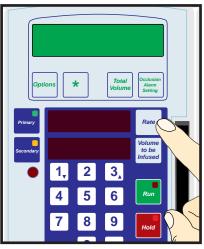

5. Press **Rate** and enter desired rate.



6. Press Volume to be Infused and enter desired volume.

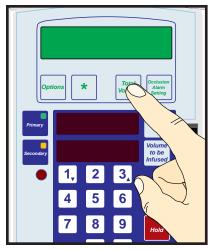


(Optional Operation)

7. Press **Total Volume** and press * to clear previous total volume.



(Optional Operation)

8. Press Occlusion Alarm **Setting** to select the correct setting.

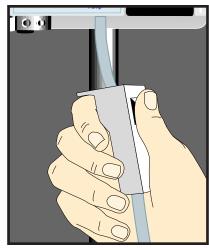


9. Open roller clamp.



10. Press **Run** to begin infusion. To stop infusion press Hold. When Volume to be Infused reaches zero, pump switches automatically to KVO rate.

SECONDARY INFUSION

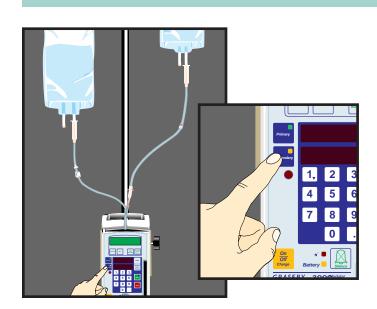

- 1. Press Hold.
- 2. Press **Secondary**.
- 3. Press **Rate** and enter secondary rate.
- 4. Press Volume to be Infused and enter secondary volume.
- 5. Press Run.

Deltec

SIMS Deltec, Inc., St. Paul, MN 55112 U.S.A.



Model 3000 and Model 3100 Micro Modular Infusion Systems

TROUBLESHOOTING

Visual alarms appear in the Message Display, and are accompanied by a corresponding audio alarm. If a problem cannot be eliminated, remove pump from patient use and have it repaired by a Deltec certified technician.

DANGER: To avoid electric shock, never open the infusion pump housing. Refer all servicing to a Deltec-qualified technician.

NOTE: During Insistent, Back Up, and Continuous audio alarms, the pump automatically stops fluid delivery. When a Non-Insistent audio alarm occurs, the pump continues to deliver fluid.

MESSAGE DISPLAY	AUDIO ALARM TYPE	CAUSES AND CORRECTION
Close clamp! Load Safety Clip	Insistent Alarm	Tubing safety clip not correctly loaded. To load safety clip: 1. Close lower roller clamp first. 2. Open door. 3. Load safety clip. 4. Close door. 5. Open lower roller clamp.
Loading problem Check tubing set	Insistent Alarm	Problem detected as door was being being closed. 1. Open door. 2. Open upper tubing clamp, if necessary. Eliminate upper tubing restriction, if any. 3. Reload cassette, if necessary. 4. Close door.
On hold	Insistent Alarm	Pump on hold 2 minutes with door closed, or 6 minutes with door open. Press <i>Silence</i> or <i>Hold</i> to silence audio alarm. Press <i>Run</i> to begin infusion, or turn pump off if not in use.
Air in cassette	Insistent Alarm	Air detected in cassette. To remove air: 1. Close lower roller clamp. 2. Open door latch. 3. Wait briefly for cassette to fill. 4. Slowly close door latch. Repeat if necessary.
		Cassette loaded backward. Make sure cassette is properly loaded (flat side out, pillow side in).
No flow above pump	Insistent Alarm	 Insufficient flow from container to pump. If empty, replace container. Raise container height so bottom of drip chamber is at least 6-12 inches above pump. Open upper tubing clamp if closed, or eliminate upper tubing restriction, if any. Replace administration set if vent filter is wet, spike is damaged, or other set problem.
Occlusion below pump	Insistent Alarm	 Pressure below pump exceeds Occlusion Alarm Setting. Open lower roller clamp if closed, or eliminate lower tubing restriction, if any. Change Occlusion Alarm Setting if not appropriate for infusion. Verify patient access device is patent.
Door open	Insistent Alarm	Door was opened while pump was running. Press <i>Hold</i> before opening door.
Secondary was set	Non-Insistent Alarm (repeated twice)	Secondary Volume to be Infused was set, but Primary was started. Reset <i>Secondary</i> , if desired, and press <i>Run</i> while Secondary is selected.
Rate change not completed	Non-Insistent Alarm	Running Rate Change was attempted but not properly completed. Press <i>Silence</i> or <i>Run</i> to silence audio alarm. Re-enter Running Rate Change.
KVO ml this infusion	Non-Insistent Alarm	Infusion is complete and pump has switched to KVO rate. Press <i>Silence</i> or <i>Run</i> to continue KVO delivery without alarm (pump re-alarms every 6 minutes) or Press <i>Hold</i> and program new infusion, or remove set and turn pump off if finished

MESSAGE DISPLAY	AUDIO ALARM TYPE	CAUSES AND CORRECTION
Low battery Plug in cord	Non-Insistent Alarm	Battery nearly depleted (1/2 hour or less remains). Plug in cord, if possible or Press Silence or Run to silence alarm for 6 minutes and continue running.
Battery too low Plug in cord	Insistent Alarm	Battery is depleted. Cord must be plugged in to continue infusion.
System check Turn off, then on	Insistent, Back Up, or Continuous Alarm	Potential pump problem detected. Turn pump off, then on. If alarm persists, remove pump from use and have it repaired by a Deltec-qualified technician.
Pump needs service	Insistent, Back Up, or Continuous Alarm	Electrical or mechanical problem. Do not use. Needs repair by Deltec-qualified technician.

PUMPS WITH DOSE-RATE CALCULATION OPTION

FOMES WITH DOSE-RATE CALCULATION OF HOM		
MESSAGE DISPLAY	AUDIO ALARM TYPE	CAUSES AND CORRECTION
Dose setup not completed	Non-Insistent Alarm	Dose-Rate Calculation setup began with pump running; dose variables not completed. Press <i>Silence</i> or <i>Run</i> to silence alarm. If desired, re-enter dose variables.
Dose change not completed	Non-Insistent Alarm	Running Dose Change was attempted, but not properly completed. Press <i>Silence</i> or <i>Run</i> to silence audio alarm. Re-enter Running Dose Change.
Dose change not accepted	Non-Insistent Alarm	Entered dose or calculated rate is invalid. Press <i>Silence</i> or <i>Run</i> to silence audio alarm. Re-enter appropriate dose variables.

MESSAGE DISPLAYS WITHOUT AUDIO ALARM

MESSAGE DISPLAY	CAUSES AND CORRECTION
Keypad locked	Keypad Lockout Button (on rear of pump) has been pressed. Unlock by pressing Keypad Lockout Button.
↓↑ ml this infusion	Quick Rate Change optional function has been selected.
Taper ml this infusion	Rate Taper optional function has been selected.
Cannot infuse * to review	Rate Taper program (or Volume Over Time program on Dose-Rate pumps) cannot be infused as entered. Infusion variable(s) must be changed.
Dose-Rate Calculation pumps only:	
Cannot infuse * to review	Dose-Rate Calculation program cannot be infused as entered. Infusion variable(s) must be changed.

If a problem exists which cannot be eliminated, do not use pump. Refer it to a Deltec-qualified technician.

ISO 9001 Registered

Deltec

SIMS Deltec, Inc., St. Paul, MN 55112 U.S.A.



remove set and turn pump off, if finished.